

mod.

# LARUS

**DELLAROVERE**  
OFFICE & CONTRACT

SCHEMA DI MONTAGGIO PER SCRIVANIA GAMBA NON ALLINEATA TIPO "B" (dritta) E "D"  
(sagomata) - 230 / 250 x 95 cm

DESK LEG NOT ALIGNED "B" (straight) AND "D" (shaped) - 230 / 250 x 95 cm ASSEMBLY DIAGRAM









SCHEMA MONTAGE POUR BUREAU PIED PAS ALIGNE "B" (droit) ET "D"(modèle)- 230 / 250 x 95 cm

TAV. 1/1


D29SM002\_01

DATA EMISS. 31/08/2015



DATA REV.01 - 08/01/16

			
			A 16
			
B 8	C 8	4 mm	D 10

1

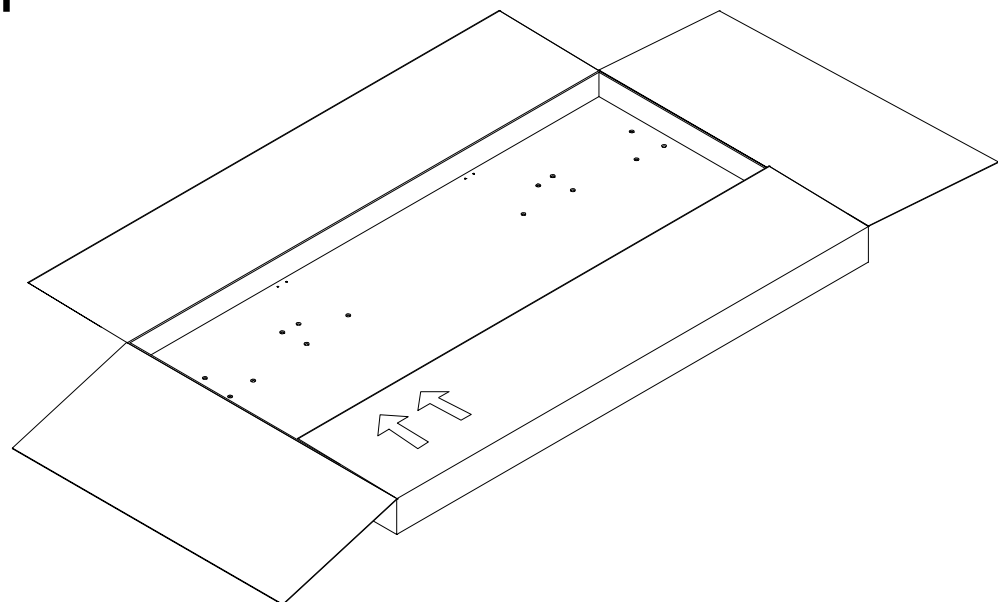


2

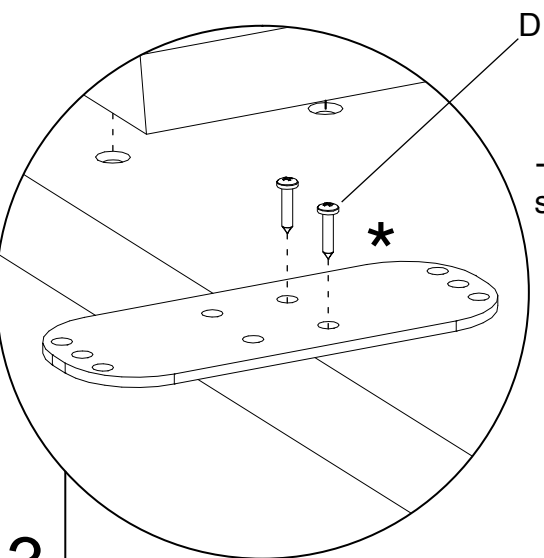
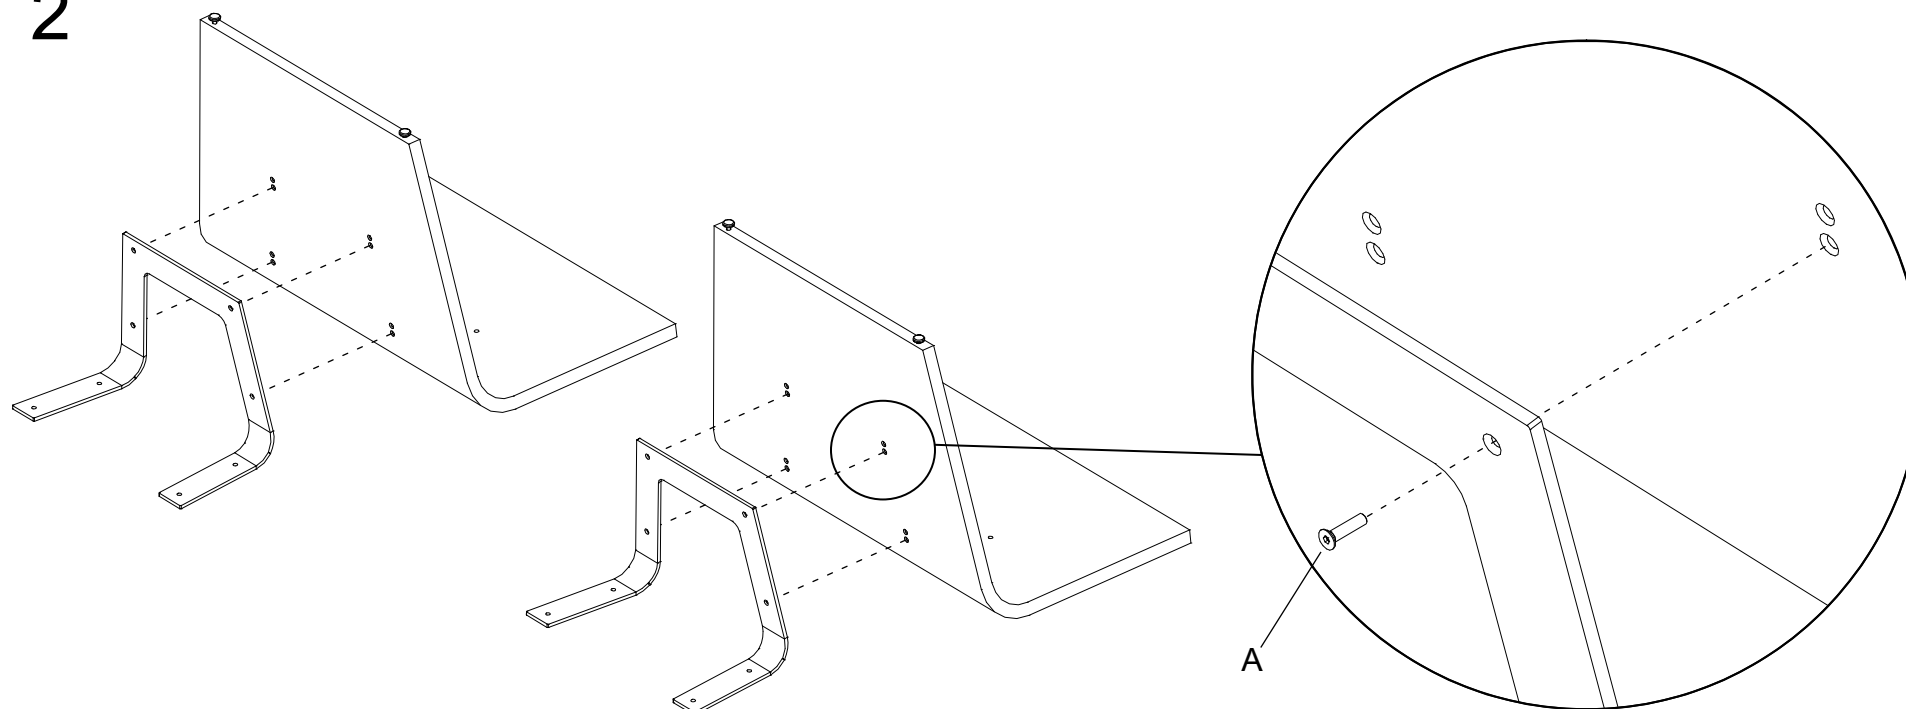


- In caso di allungo esterno, fissare la staffa(\*) sul piano scrivania prima di montare la gamba.  
- In case of a external estension fasten the bracket (\*) on the plan desk before assembling the leg.  
- En cas de rallonge extérieur fixer le support (\*) sur l'étage bureau avant d'assembler le pied.

3

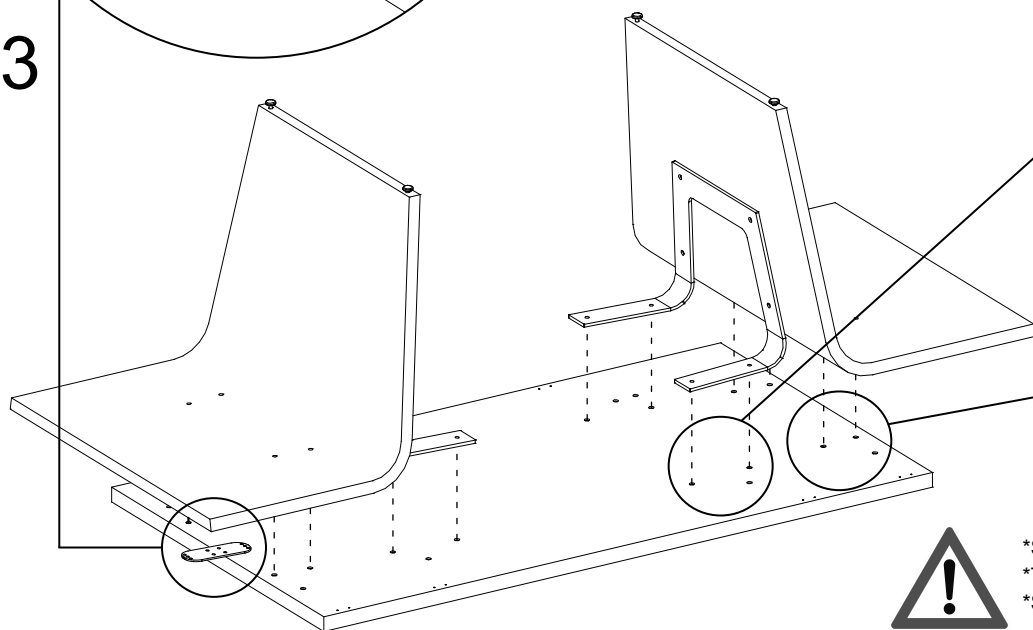

4

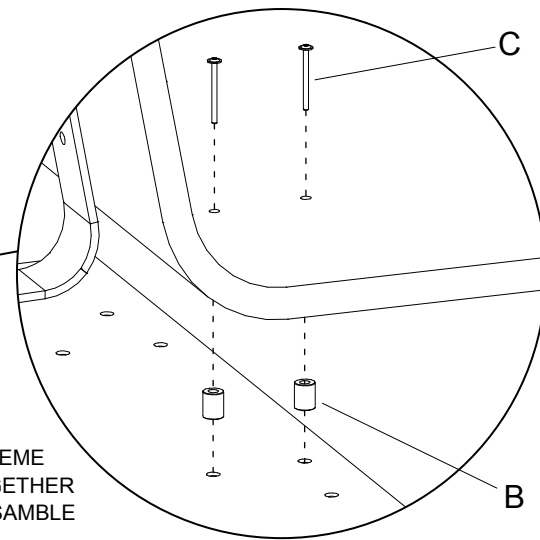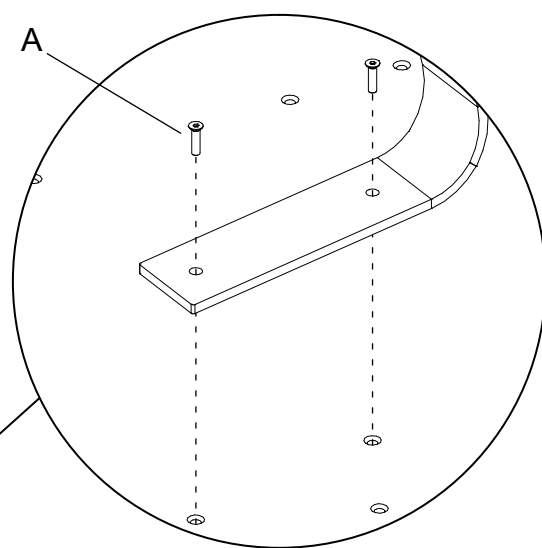

\*STRINGI TUTTE LE VITI INSIEME  
\*TIGHTEN SCREWS ALL TOGETHER  
\*SERRER LES VIS TOUS ENSEMBLE

